


RADOX - Hercules

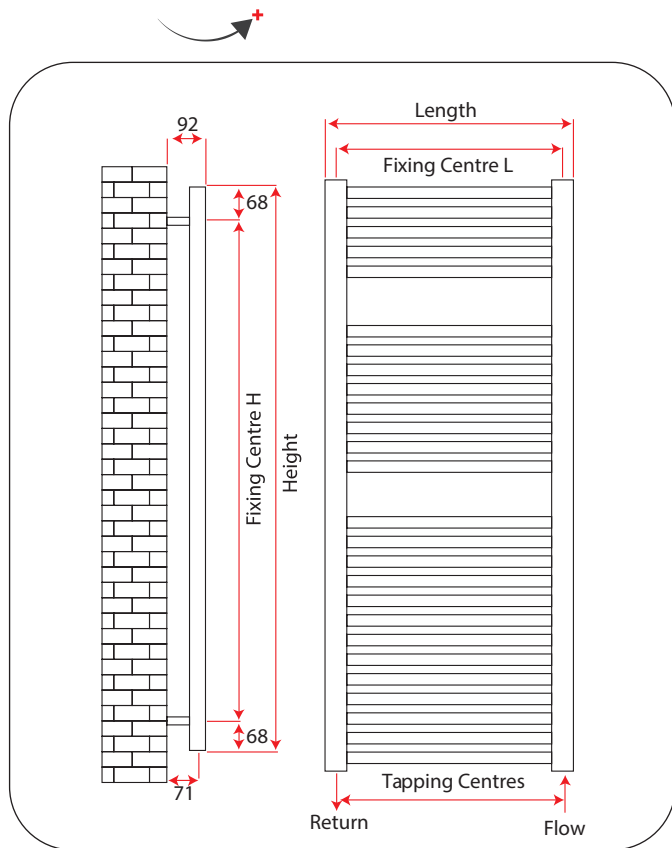


- All the dimensions are shown in millimetres
- Tube dia 25mm
- Header tube dia 42mm
- Bracket length - 50mm
- ½ inch BSP bottom opposite end connections
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output - in accordance with EN 442

Please Note:

- Please allow minimum of 100mm for valves
- Summer Element use will affect pipe centres
- Not suitable for use on domestic hot water system
- The flow and return can be reversed

Hercules	Water Content (L)	Weight (KG)	Tapping Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (L) +/- 2mm	Height (mm)	Length (mm)
RXHE-0800542	5.5	8.7	500	664	500	800	542
RXHE-1200542	8.09	12.7	500	1054	500	1200	542
RXHE-1500542	10.46	16.39	500	1366	500	1500	542
RXHE-0800642	6.3	9.76	600	664	600	800	642
RXHE-1200642	9.17	14.24	600	1054	600	1200	642
RXHE-1500642	11.87	18.41	600	1366	600	1500	642
RXHE-1000742	8.37	12.9	700	864	700	100	742
RXHE-0600842	5.69	8.7	800	469	800	605	842
RXHE-06001042	6.77	10.24	1000	469	1000	605	1024

Installation:

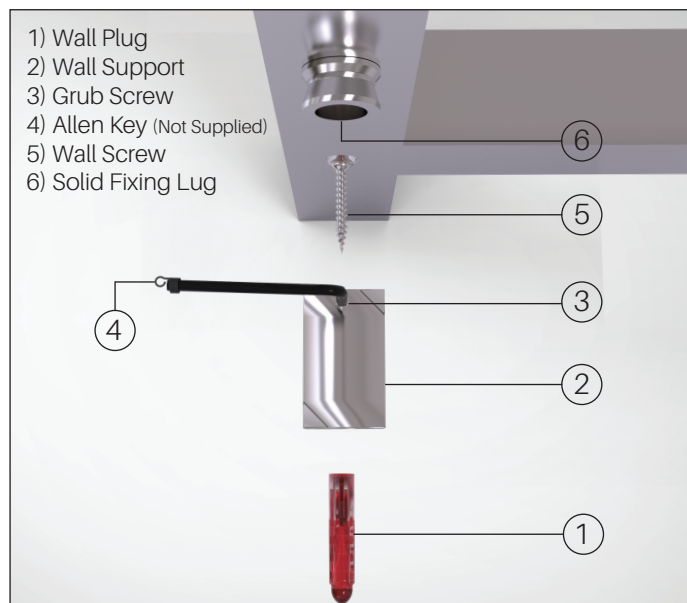

Step 1: Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

Step 2: Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do not tighten fully.

Step 3: Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

Cleaning:

- Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
- Do not clean when hot.